

TAKEOUT BOX

LAUNDRY HAMPER



1x HAMPER



1x BOTTOM PANEL



4x POLES WITH PEG



4x POLES WITHOUT PEG

1

INSERT BOTTOM PANEL INTO BOTTOM OF HAMPER. BE SURE THE TRIANGLE POCKETS IN EACH CORNER ARE NOT FOLDED UNDER THE PANEL.




2

PLACE HAMPER ON ITS SIDE WITH EXTERIOR ART VISIBLE ON BOTH SIDES AS SHOWN BELOW.




3

INSERT POLES WITH PROTRUDING PEGS INTO BOTTOM LEFT AND BOTTOM RIGHT TRIANGLE POCKETS. POLES SHOULD LAY DIAGONALLY ACROSS MIDDLE HOOK-AND-LOOP STRAP.

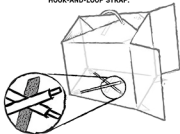


4

COMPLETE CROSSBAR BY INSERTING TOP OF POLE ONTO PEG. FASTEN MIDDLE HOOK-AND-LOOP STRAP TIGHTLY.

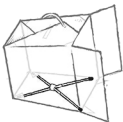


5

PULL HAMPER TAUNT WHILE FOLDING HOOK-AND-LOOP TRIANGLE OVER TOP POLE. BE SURE VELCRO IS TIGHT OR POLE WILL SLIP.



6

FLIP HAMPER OVER ONTO OPPOSITE SIDE AND REPEAT STEPS 3 THROUGH 5.

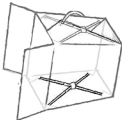

7

PLACE UPRIGHT AND TIGHTEN HOOK-AND-LOOP FASTENERS WHERE NECESSARY.

